

MMPH

INDUSTRIES®

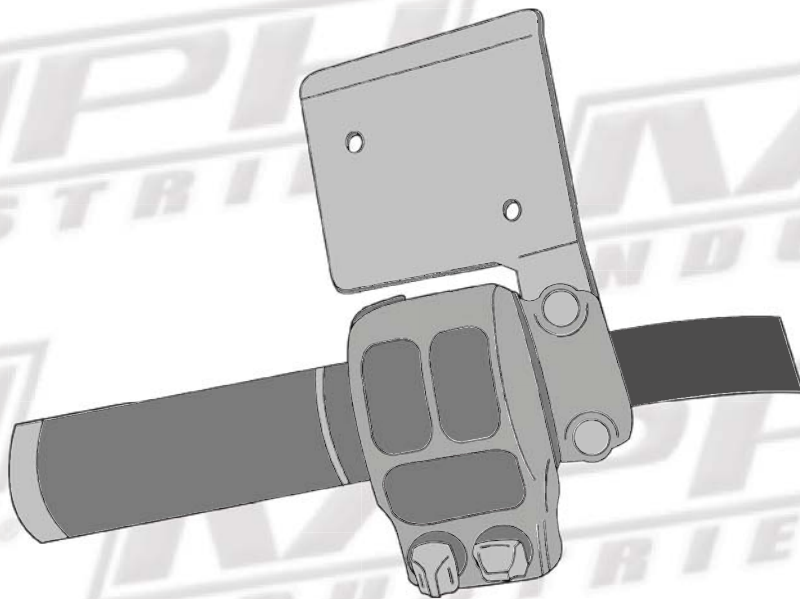
Installation Guide

Harley Davidson Remote Bracket


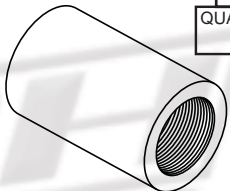
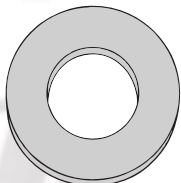

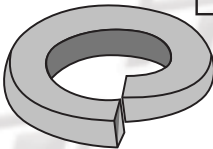
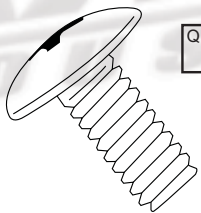
PT# ai.951298

Installation Materials

ai.951298



Harley Davidson
Remote Bracket

909938G01	A	909966	B
QUANTITY 1		QUANTITY 2	
			
Remote Bracket		Spacer 1/4 x .683"	
408048	C	909967	D
QUANTITY 2		QUANTITY 2	
			
Regular Washer #6		Screw 1/4 -20x1.70"	
408049	E	908298	F
QUANTITY 2		QUANTITY 2	
			
Lock Split Washer #6		Screw 6-32x .375	

Installation Process

<div data-bbox="73 178 470 745"> </div> <div data-bbox="462 157 511 262"> <p>1</p> </div> <div data-bbox="56 756 535 840"> <p>Remove screw from clamp of the left hand control cluster of the handle bars. Place the Remote Bracket (A) between the clamp.</p> </div>	<div data-bbox="576 168 1006 735"> </div> <div data-bbox="966 157 1015 262"> <p>2</p> </div> <div data-bbox="568 756 1047 840"> <p>Taking the Regular Washer (C) place onto the Screw (D) provided in the kit. Place the Remote Bracket (A) between the Regular Washer (C) and the Spacer (B).</p> </div>	<div data-bbox="1112 157 1453 756"> </div> <div data-bbox="1477 157 1526 262"> <p>3</p> </div> <div data-bbox="1079 756 1550 840"> <p>Thread the Screw (D) into the existing nut of the already installed clamp. This holds the Remote Bracket (A), and Spacer (B) together.</p> </div>
<div data-bbox="121 871 544 1438"> </div> <div data-bbox="462 861 511 966"> <p>4</p> </div> <div data-bbox="64 1438 527 1522"> <p>Once the bracket is firmly built, take the radar remote and place it onto the face of the Remote Bracket (A) lining up the two holes on the back.</p> </div>	<div data-bbox="576 882 1031 1417"> </div> <div data-bbox="966 861 1015 966"> <p>5</p> </div> <div data-bbox="568 1428 1039 1533"> <p>Fit the Lock Split Washer (E) onto the Screw (F). Thread the Screw (F) through the hole on the backside of the Remote Bracket (A) to hold the radar remote to the Remote Bracket (A).</p> </div>	<div data-bbox="1071 1029 1550 1386"> </div> <div data-bbox="1477 861 1526 966"> <p>6</p> </div> <div data-bbox="1096 1438 1534 1522"> <p>Continue to run the electric wire for the radar remote to a safe place. Be sure to tighten all installed Screws (D)(F).</p> </div>
<div data-bbox="73 1554 138 1659"> <p>7</p> </div> <div data-bbox="162 1711 600 1942"> <p>Harley Davidson Remote Bracket Part# ai.951298</p> </div> <div data-bbox="860 1554 1291 2037"> </div>		

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
A	1	909938G01	Remote Bracket
B	2	909966	Spacer 1/4 x .683"
C	2	408048	Regular Washer #6
D	2	909967	Screw 1/4 - 20x1.70"
E	2	408049	Lock Split Washer #6
F	2	908298	Screw 6-32 x .375

