

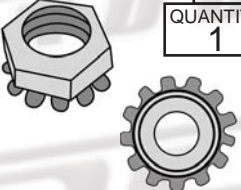
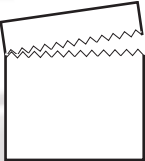
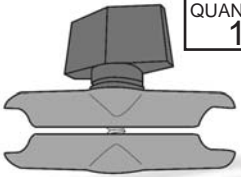

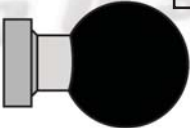

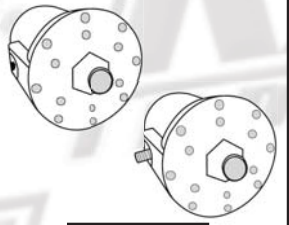


MMPH INDUSTRIES®

Installation Guide Window Bracket Antenna Arm & Ball Assembly

Fits: BEE III, Python III, and Ranger

Installation Materials

<p>400011</p> <p>A</p>  <p>QUANTITY 1</p> <p>KEP Nut</p>	<p>560029</p> <p>B</p>  <p>QUANTITY 1</p> <p>Rearview Adhesive Kit</p>	<p>908036</p> <p>C</p>  <p>QUANTITY 1</p> <p>Hex Nut</p>	<p>909804</p> <p>D</p>  <p>QUANTITY 1</p> <p>Alcohol Swab</p>	<p>910722</p> <p>E</p>  <p>QUANTITY 1</p> <p>Double Ball Arm</p>
<p>910723</p> <p>F</p>  <p>QUANTITY 1</p> <p>Stud Ball</p>	<p>910724</p> <p>G</p>  <p>QUANTITY 1</p> <p>POS Ball</p>	<p>910725</p> <p>H</p>  <p>QUANTITY 1</p> <p>Windshield RAM Bracket</p>	 <p>Not Included</p>	

PT#
ai.951688

Installation Process

1

Screw the Hex nut (C), washer away from the antenna, onto the stud of antenna. Tighten the nut. Attach POS Ball (G) to the antenna stud and tighten against the Hex nut (C).

2

Place the Stud Ball (F) into one side of the Double Ball Arm (E). Place the open side of the Double Ball Arm (E) onto the POS Ball (G) attached to the antenna. Tighten the knob.

3

On the threaded side of the Stud Ball (F) place the Windshield RAM Bracket (H) onto the end. Screw the KEP Nut (A) onto the other side of the Windshield RAM Bracket, washer touching the bracket. Tighten to hold in place.

4

Open adhesive glue tube (B) and place a dot of glue onto the center of the mount.

5

Pick a spot on the windshield of the vehicle you prefer to mount the antenna. Take the Alcohol Swab (D) and clean the area well. Place the antenna and the fixed pieces onto the window and push firm to ensure adhesive will stick.

6

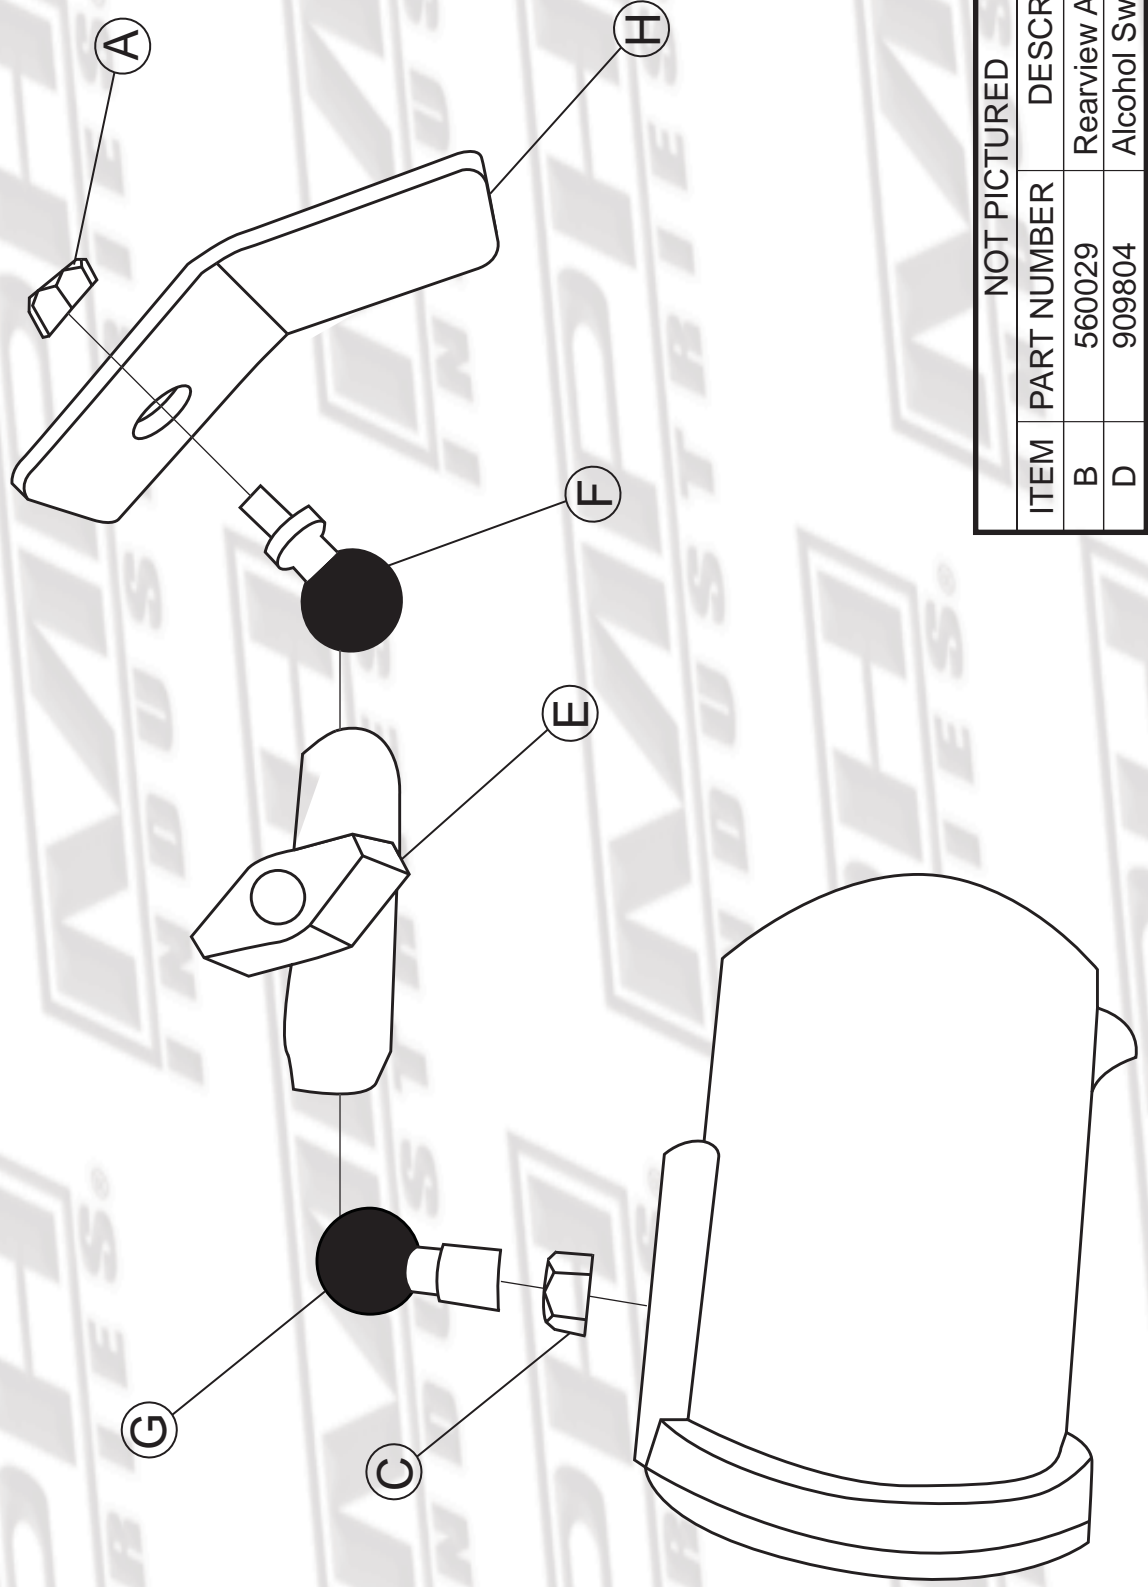
Once antenna has been firmly placed on the windshield, you can now loosen the Double Ball Arm (E) and maneuver the mount to an acceptable angle. Tighten the knob once satisfied.

7

Universal
 Window Bracket
 Mount Assembly
 Antenna Arm & Ball
 Part# ai.951688

WPI INDUSTRIES®

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
A	1	400011	KEP Nut
B	1	560029	Rearview Adhesive Kit
C	1	908036	Hex Nut
D	1	909804	Alcohol Swab
E	1	910722	Double Ball Arm
F	1	910723	Stud Ball
G	1	910724	POS Ball
H	1	910725	Windshield RAM Bracket



NOT PICTURED	
ITEM	DESCRIPTION
B	Rearview Adhesive Kit
D	Alcohol Swab